


REV.	LOC.	REVISION	DATE
B		Updated Logos	12/23/20

# House

If posts will be more than  $3\frac{7}{8}$ " apart at top of stairs you will need to change them to corner posts.  
 1) Corner tension post  
 1) Corner Through Post  
 The post at top of stairs would be the through post and the tension post would be off to the side.

- 1) 4ft. rail kit with mounts
- 5) 6ft. rails kits with mounts
- 3) 8ft. rail kits with mounts
- 2) 4ft. Stair Rail kits with mounts
- 4) 6t. stair rail kits with mounts
- 6) End Tension Posts (EP)
- 4) Stair End Tension Posts (SETP)
- 5) Line Posts with (LP)
- 2) Stair Crossover Line Posts (SCLP)
- 3) Corner Through Posts (CTHP)

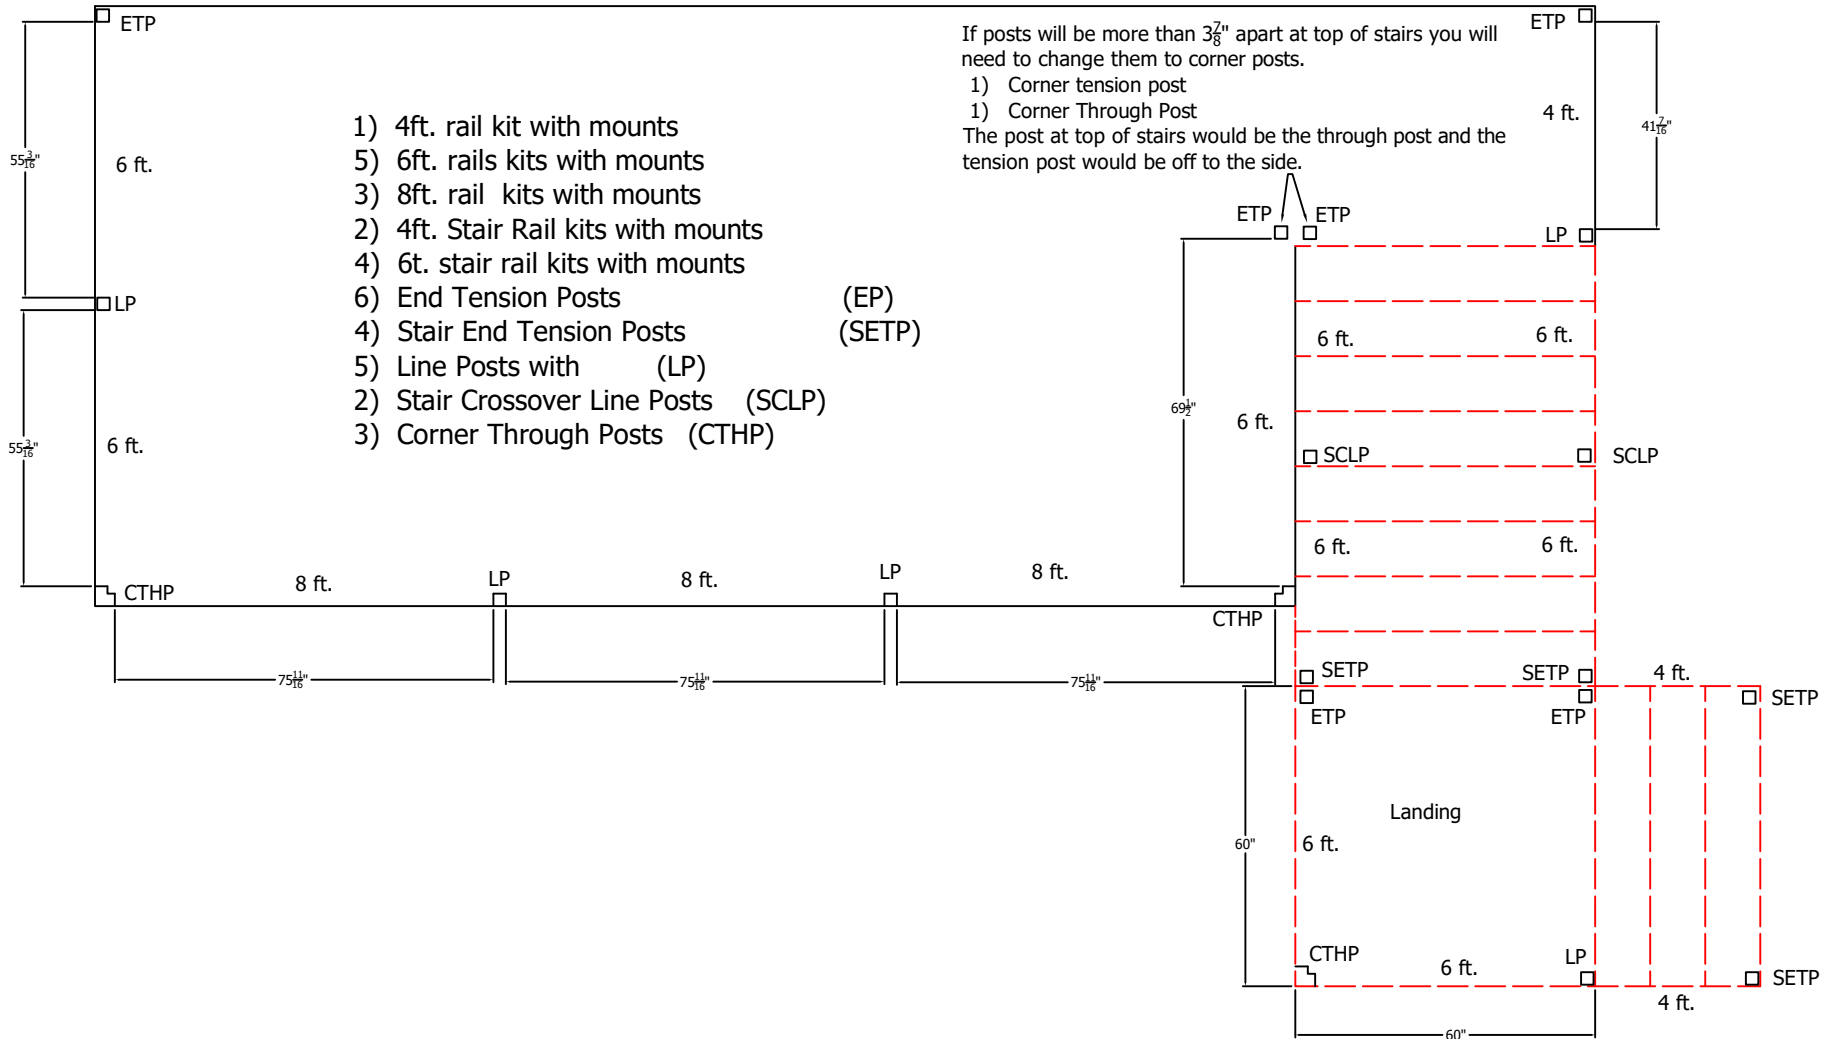

**DSI** Digger Specialties Inc.  
*Transforming the Outdoor Living Experience™*  
 3446 US 6 EAST  
 Bremen, IN 46506  
 diggerspecialties.com

DRAWN BY: EH	<b>CP16</b> <b>C90 Deck Take Off 20 x 10 stairs on side with landing</b>	REV.
DATE DRAWN: 09-06-2024		
SCALE = 1":1"		AS SHOWN: 72" T
DRAFT NO.: 20240906-1E	LOC: L:\CAD DWG\Drawings 2024\Miscellaneous	B