



REV.	LOC.	REVISION	DATE
B		Updated Logos	12/23/20


House

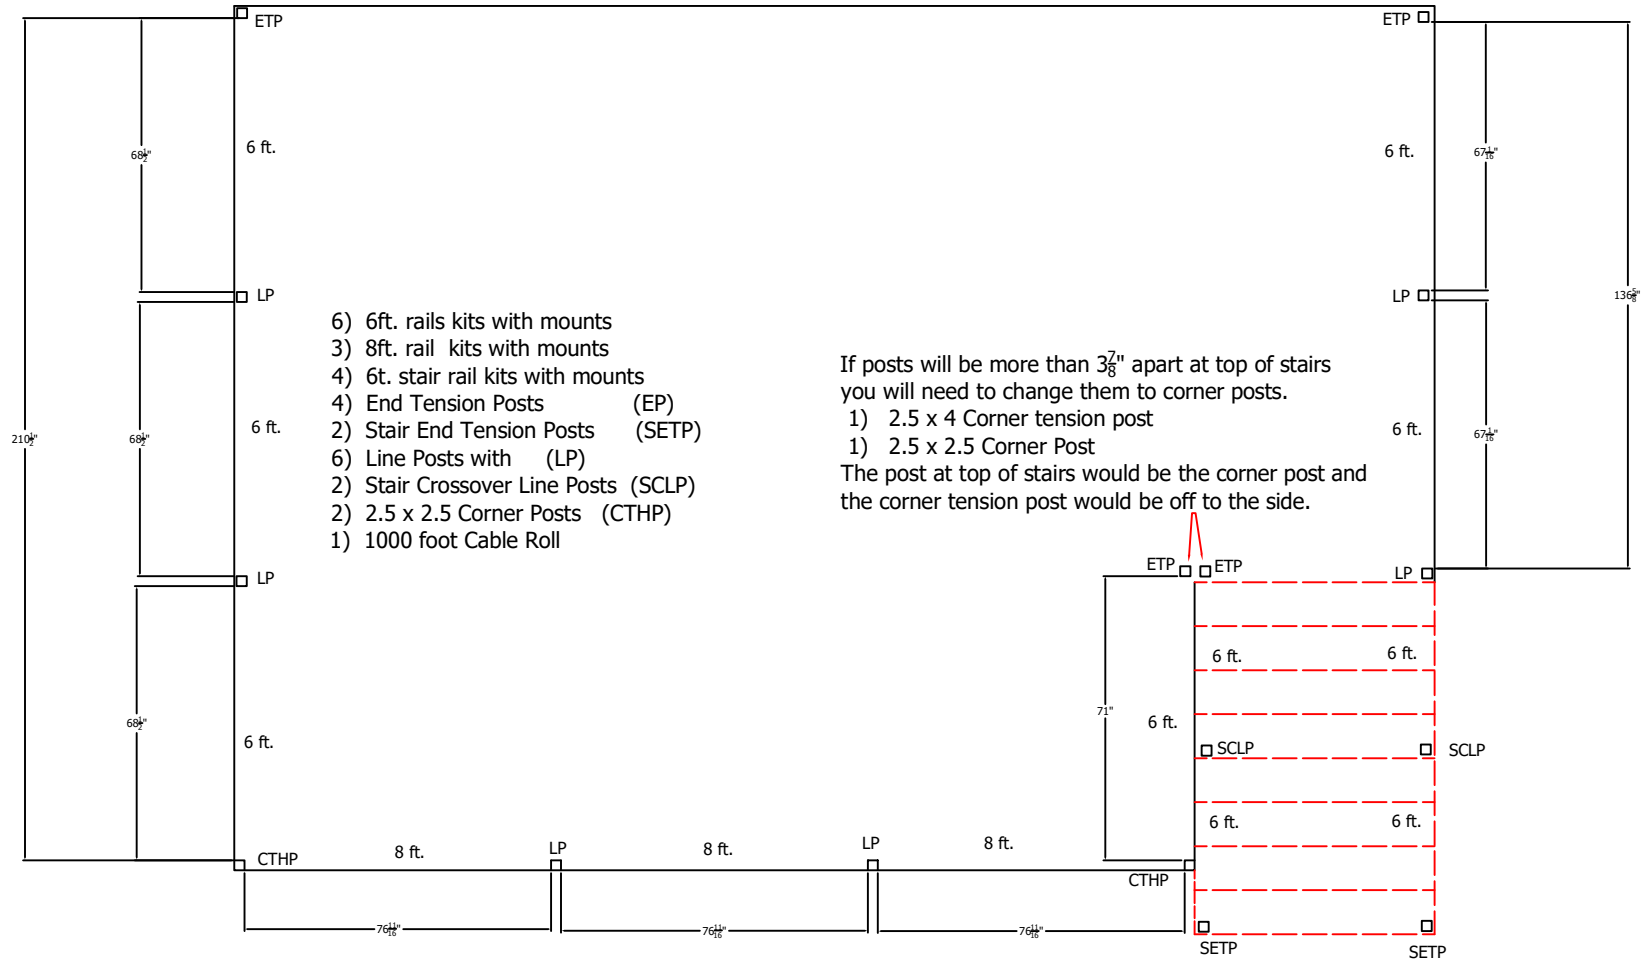

- 6) 6ft. rails kits with mounts
- 3) 8ft. rail kits with mounts
- 4) 6t. stair rail kits with mounts
- 4) End Tension Posts (EP)
- 2) Stair End Tension Posts (SETP)
- 6) Line Posts with (LP)
- 2) Stair Crossover Line Posts (SCLP)
- 2) 2.5 x 2.5 Corner Posts (CTHP)
- 1) 1000 foot Cable Roll

If posts will be more than $3\frac{7}{8}$ " apart at top of stairs you will need to change them to corner posts.
 1) 2.5 x 4 Corner tension post
 1) 2.5 x 2.5 Corner Post
 The post at top of stairs would be the corner post and the corner tension post would be off to the side.

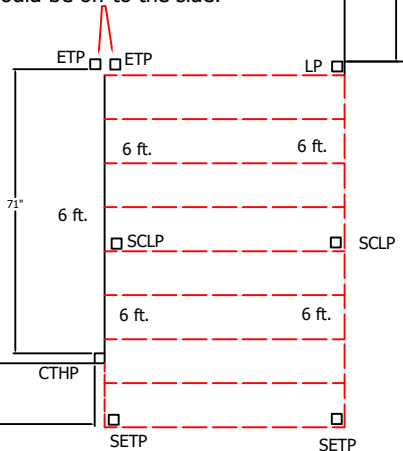

 <p>DSI Digger Specialties Inc. <i>Transforming the Outdoor Living Experience™</i></p> <p>3446 US 6 EAST Bremen, IN 46506 diggerspecialties.com</p>	DRAWN BY: EH DATE DRAWN: 11-04-2024 SCALE = 1":1"	STYLE: C90 Deck Take Off 20 x 18 stairs on side AS SHOWN: 72" T	
	DRAFT NO.: 20241104-1E	LOC: L:\CAD DWG\Drawings 2024\Miscellaneous	REV. B