



| REV. | LOC. | REVISION      | DATE     |
|------|------|---------------|----------|
| B    |      | Updated Logos | 12/23/20 |
|      |      |               |          |
|      |      |               |          |
|      |      |               |          |


# House

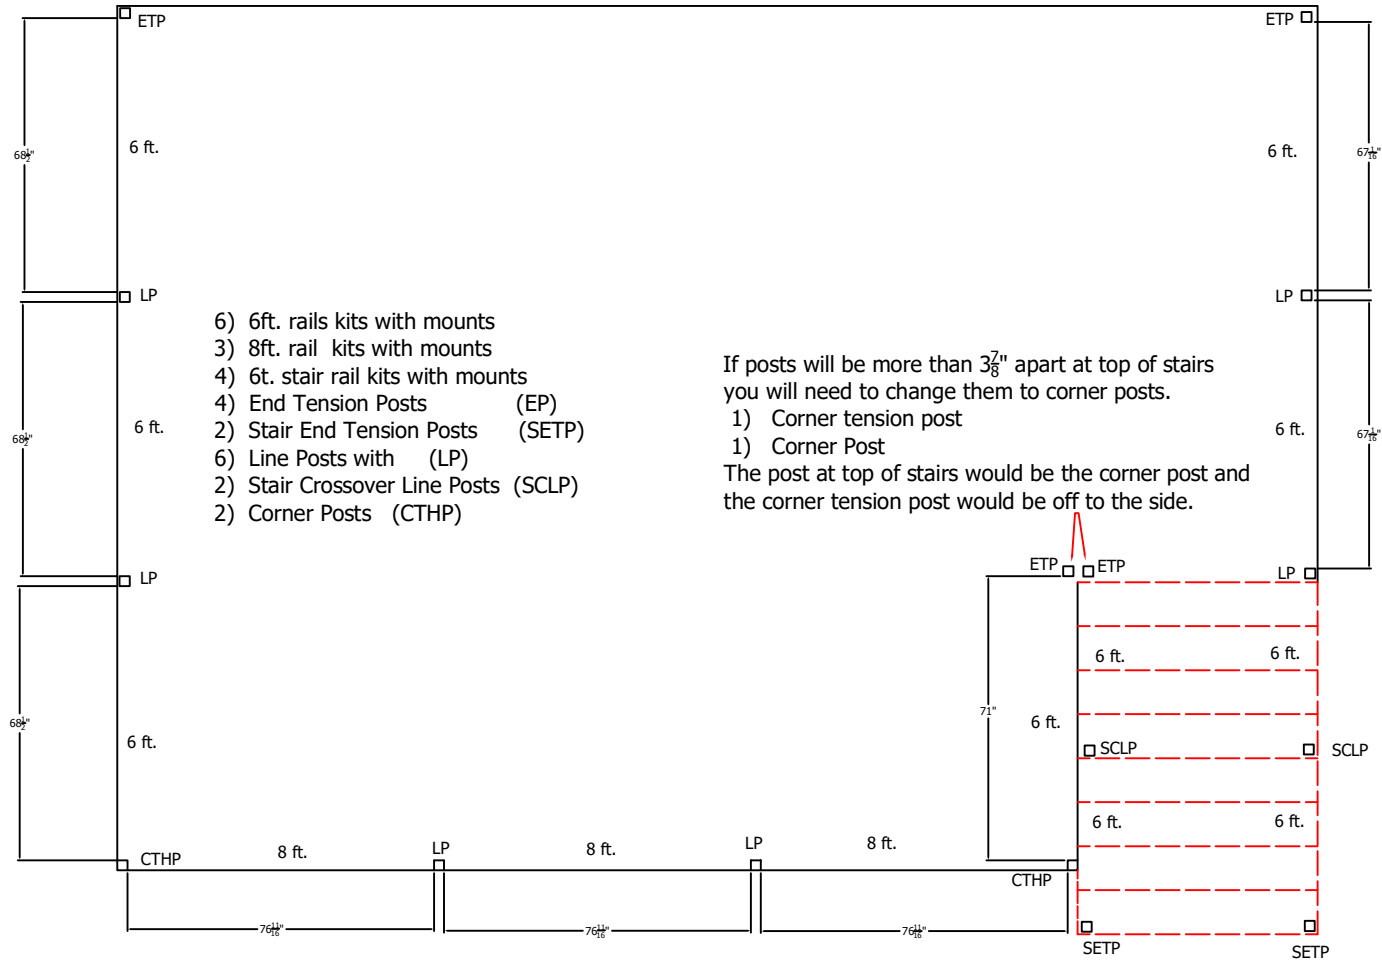

- 6) 6ft. rails kits with mounts
- 3) 8ft. rail kits with mounts
- 4) 6t. stair rail kits with mounts
- 4) End Tension Posts (EP)
- 2) Stair End Tension Posts (SETP)
- 6) Line Posts with (LP)
- 2) Stair Crossover Line Posts (SCLP)
- 2) Corner Posts (CTHP)

If posts will be more than  $3\frac{7}{8}$ " apart at top of stairs you will need to change them to corner posts.  
 1) Corner tension post  
 1) Corner Post  
 The post at top of stairs would be the corner post and the corner tension post would be off to the side.

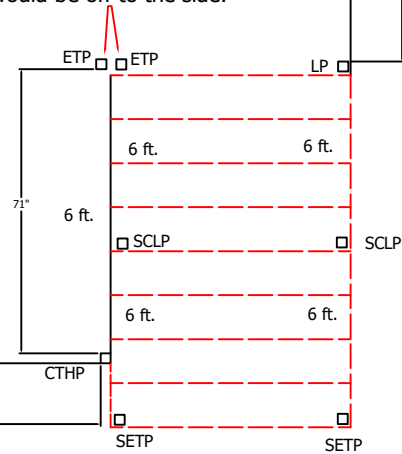

|   |   |  |
|---|---|--|
| <br>DSI Digger Specialties Inc.<br><i>Transforming the Outdoor Living Experience™</i><br>3446 US 6 EAST<br>Bremen, IN 46506<br>diggerspecialties.com | DRAWN BY: EH<br>DATE DRAWN: 10-28-2024<br>SCALE = 1":1" | STYLE:<br><b>C90 Deck Take Off 20 x 18 stairs on side</b><br>AS SHOWN: 72" T |
|   | DRAFT NO.: 20241028-1E                                  | LOC: L:\CAD DWG\Drawings 2024\Miscellaneous                                  |
|   | REV. <b>B</b>   |  |