

Juliette Balcony

(Style C10)

Installation Instructions



- It is the responsibility of the installer to meet all code and safety requirements, and to obtain all required building permits. The installer should determine and implement the installation techniques appropriate for each unique installation situation. Digger Specialties, Inc. and its distributors shall not be held liable for improper or unsafe installations.
- These instructions must be followed exactly as written and the materials used must be exactly as shown in the instructions. Any deviation from the instructions or variation in the materials used/installed may result in an unsuccessful installation and will void the warranty.

Site Preparation


Care should be exercised when preparing for a Juliette Balcony install. In most instances the balcony will need to be lifted into place and should be done with equipment that is rated for heavy lifting using a qualified operator to operate the lifting equipment.

Careful site preparation is required with a thorough understanding of where balcony is to be installed.

Juliette Balcony will need to be attached to solid wall structure with appropriately rated fasteners to meet all applicable code requirements.

Juliette Balconies should not be altered in any way and will have to be installed as ordered.

Installation cont'd

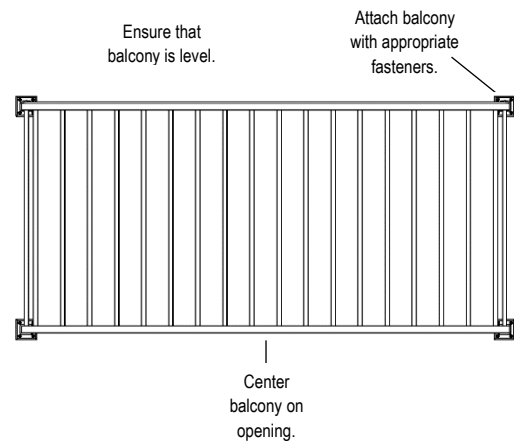

Recommended Tools and Supplies

Cordless Drill	Drill bits
Level	Tape Measure
Impact Driver	Bit for fasteners
Lift	
Fasteners: Use #14 wood screws or 3/16" diameter masonry screws (16 required).	

Installation

Position balcony into desired location. Use a tape measure and level to ensure that balcony is centered on opening and level. Use drill with drill bit to pre-drill holes for fasteners through mounting plates. Use appropriately rated fasteners to attach balcony to solid wall structure.

Care and Cleaning

Remove all particles and residue from Westbury aluminum components by referring to the Care and Cleaning requirements on the DSI website.

