

2



1


Installation Instructions:

1. Place (3) brackets on bottom of column as illustrated.
2. Use construction adhesive (not included) to adhere the bracket to the column.
3. Drill 5/32" pilot holes through the bracket into the substrate. (Drill bit not included.)
4. Fasten bracket with the supplied screws.
5. Repeat steps for top of column.


Brackets are not a wind uplift device

B


B

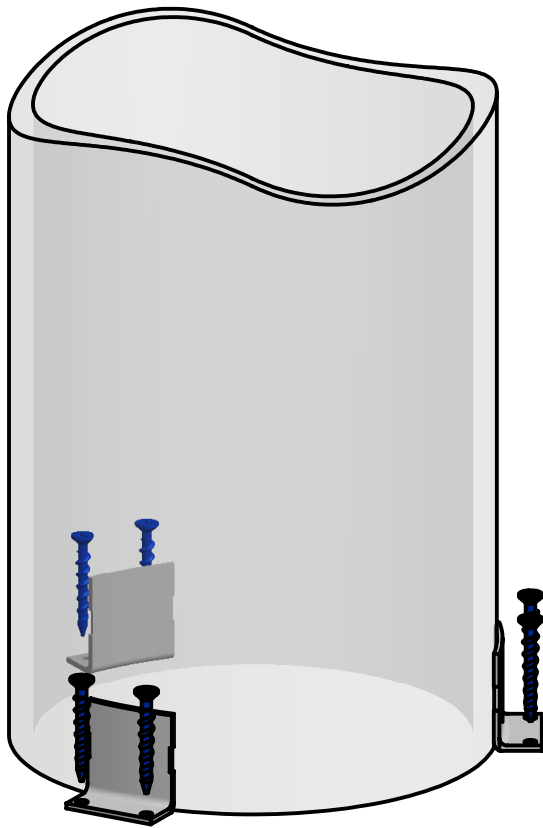

INSTALLATION EXAMPLE

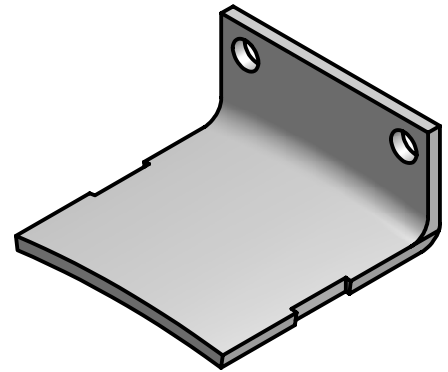

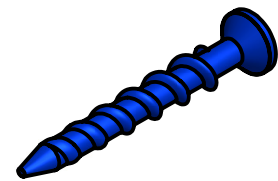

ROUND MOUNTING BRACKET
(6 INCLUDED)



TAPCON 3/16 X 1 3/4 SCREW
(12 INCLUDED)

A

A

| | | | | | | |
|---|---------------|-----------|---|---|-----|----|
| DRAWN | Bryan Daniels | 5/18/2016 |  Digger Specialties Inc. <i>Transforming the Outdoor Living Experience</i> |  Westbury <small>COLUMNS</small> | | |
| CHECKED | | | | | | |
| QA | | | | | | |
| MFG | | | | | | |
| APPROVED | | | | | | |
| DIMENSIONS ARE IN INCHES TOLERANCE: ± 1/4" | | | TITLE Fiberglass Column Round Bracket Kit | | | |
| SIZE | A | | DWG NO | Round Bracket Kit | REV | 01 |
| SCALE | NTS | | SHEET 1 OF 1 | | | |

2



1