


Installation Instructions for Crossover Post & Section

SIDE - 1

Step # 1

Determine distance between the two end posts and find the center where the Crossover Post will be installed. Make sure it is lined up with other posts. (See *Drawing A*)

(See page # 2 for all post mount installation.)

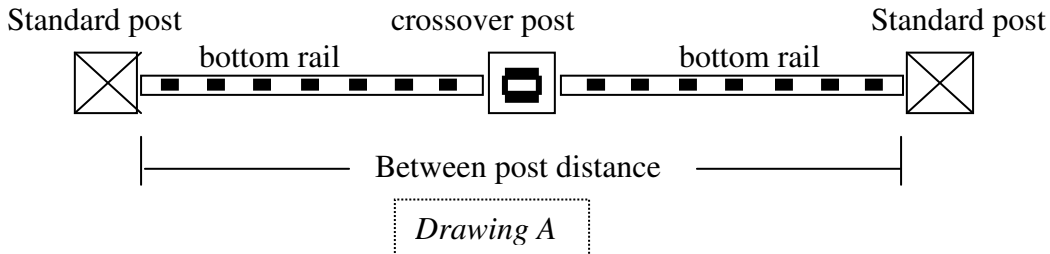

Step # 2

Put a post flair on the 4 x 4, then slide the vinyl post over the crossover post mount.

Step # 3

Fasten bottom rails to post using the wall mounts and screws provided.

Step # 4

(See *Drawing D* on reverse side)

Insert all the spindles into bottom rails. (See *Drawing D* on reverse side)

Step # 5

Hook the hook assembly into the center hole of the top rail.

Hook assembly should have a 4" Post cap fitted on it. (See *Drawing C* on reverse side)

Step # 6

Start top rail on one end and fit spindles into rail as you lower it.

NOTE: Hook assembly has to feed into Crossover post when rail is fitted into place. (See *Drawing D* on reverse side)

Step # 7

Fasten top rail to post using the wall mounts and screws provided.

Step # 8


Pull hook assembly down tight and drill a 3/16" hole through stem where the Predrilled hole is in the very top of the crossover post mount.

(See *Drawing C* on reverse side)

Step # 9

Fasten Hook assembly to mount with the 3" screw provided.

Glue 4" post cap and slide it down in place.

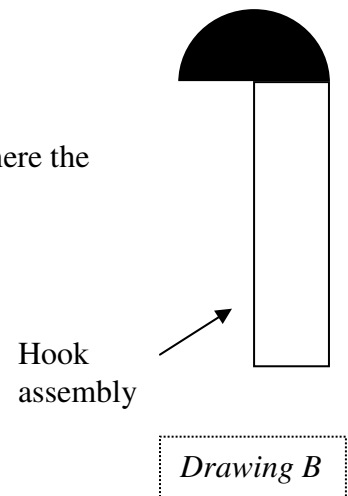

Side # 2

